



Shock-Absorbing Box Rail

INSTALLATION INSTRUCTIONS

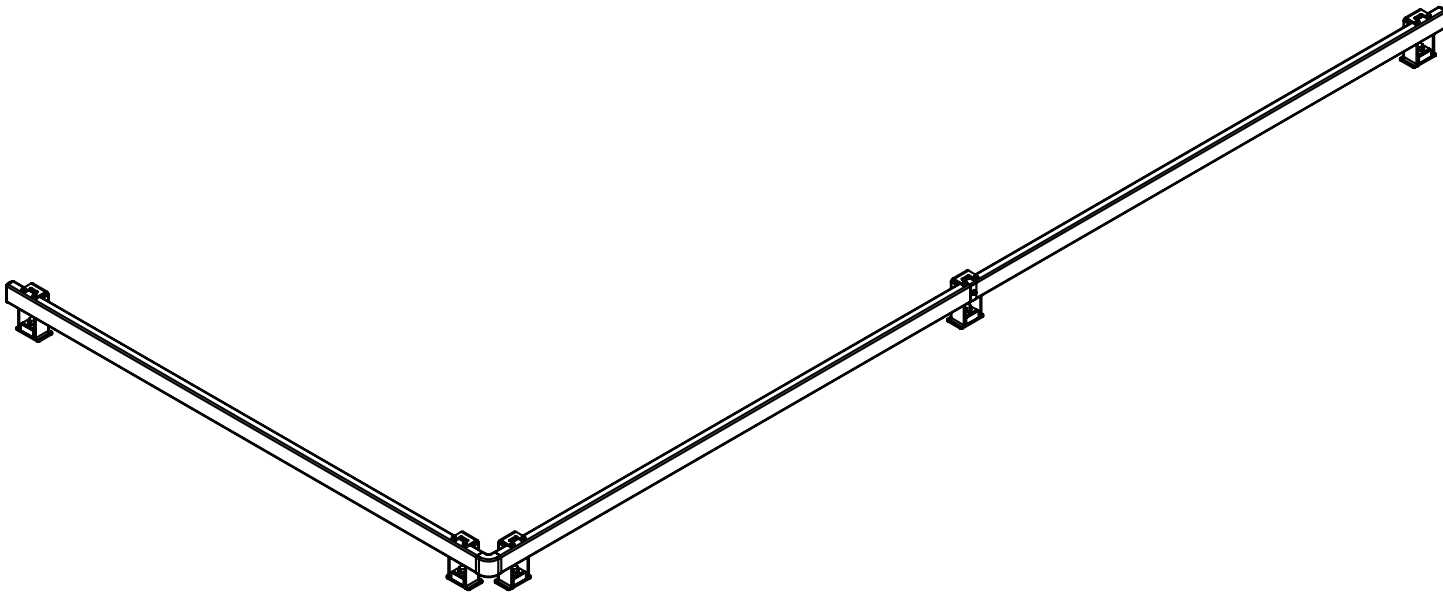

Components

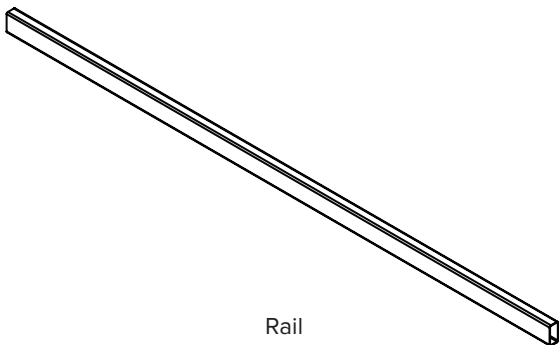


Rail




Tek Screws



End Caps



Concrete Anchor



Leg Kit

Tools Required



Impact Driver



15/16" Socket



Hammer Drill



Drill Bit



Hand Drill



Tape Measure



Pencil




Mallet




Vacuum

1

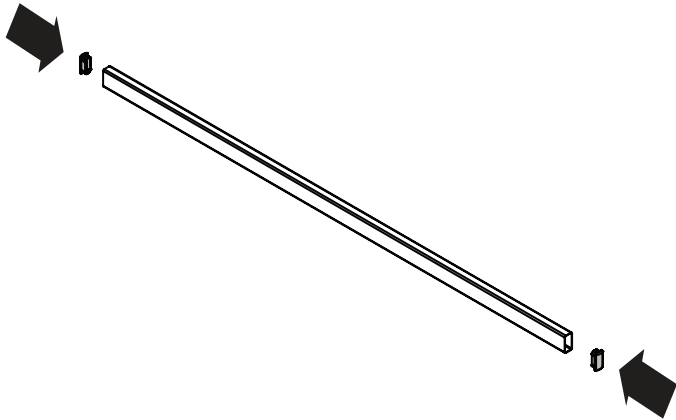


2

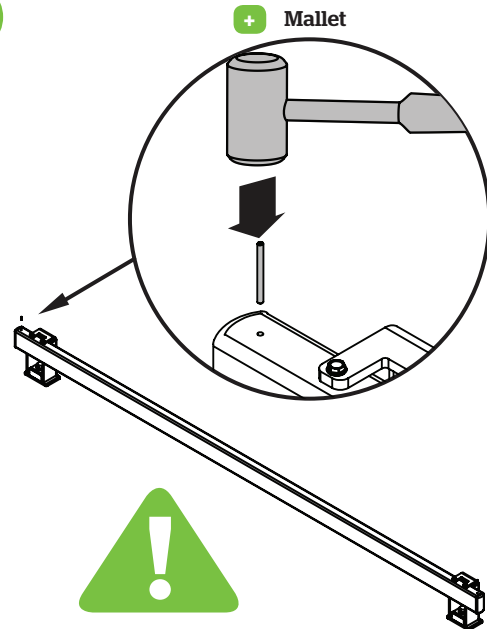


IMPORTANT: To secure end cap, drill a pilot hole 0.125" [3.2mm] diameter at 0.5" [13mm] from end cap


3

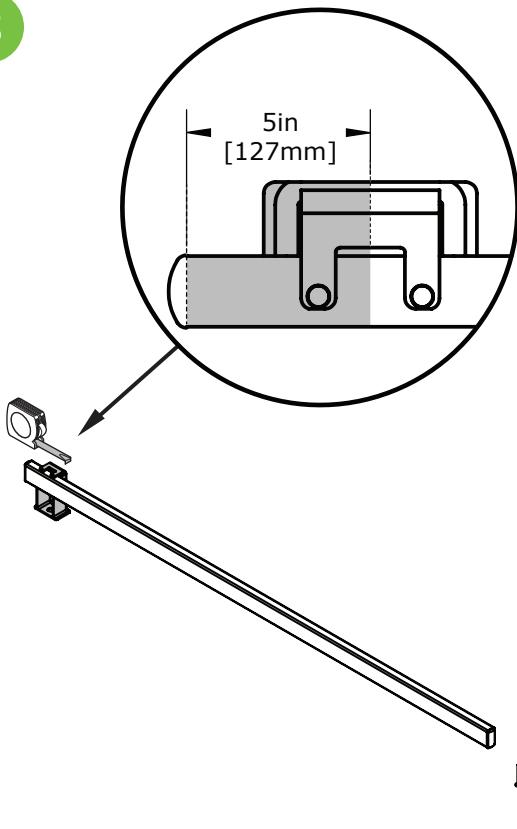


4

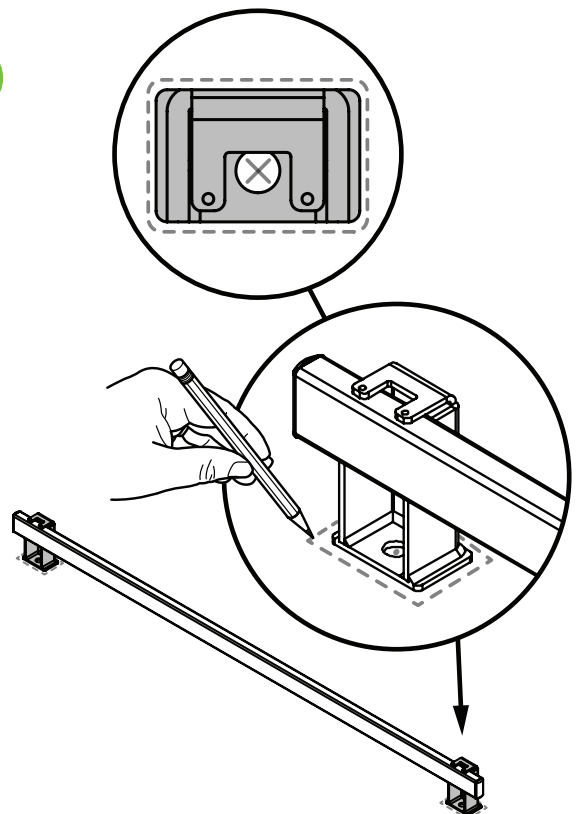


5

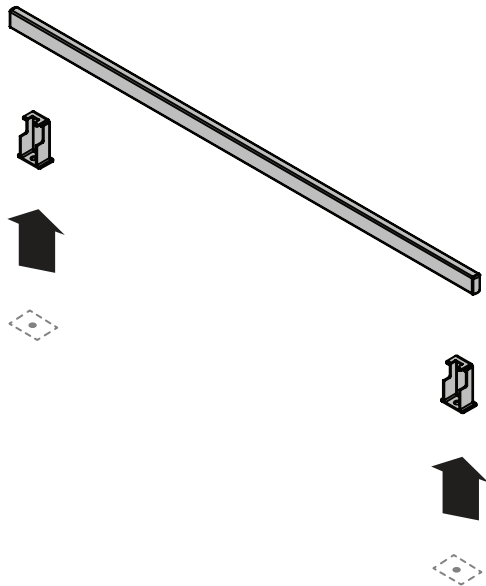


6

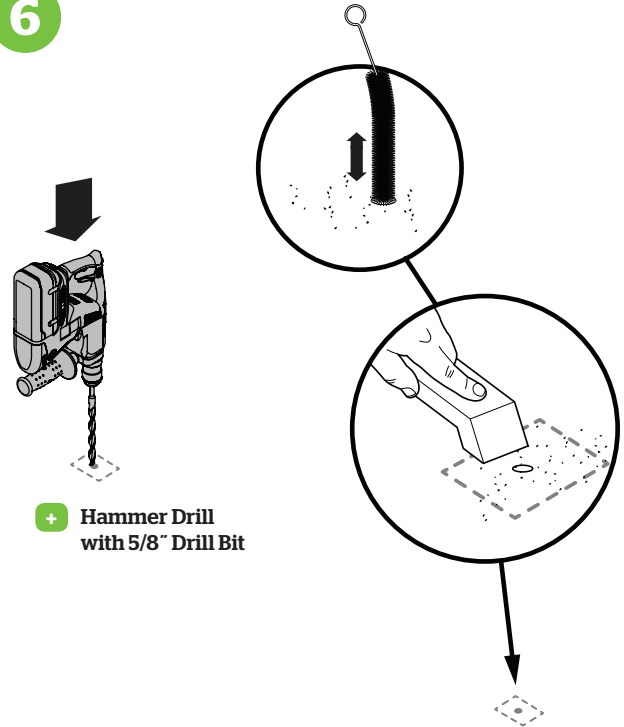


7

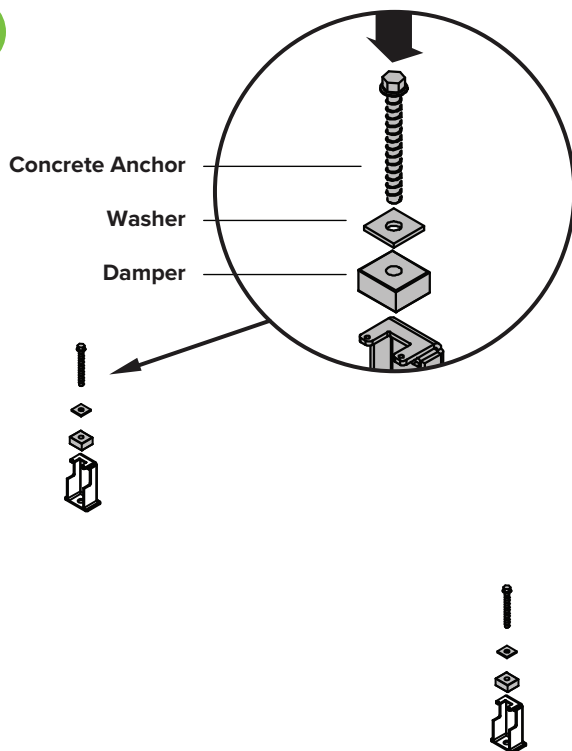



8

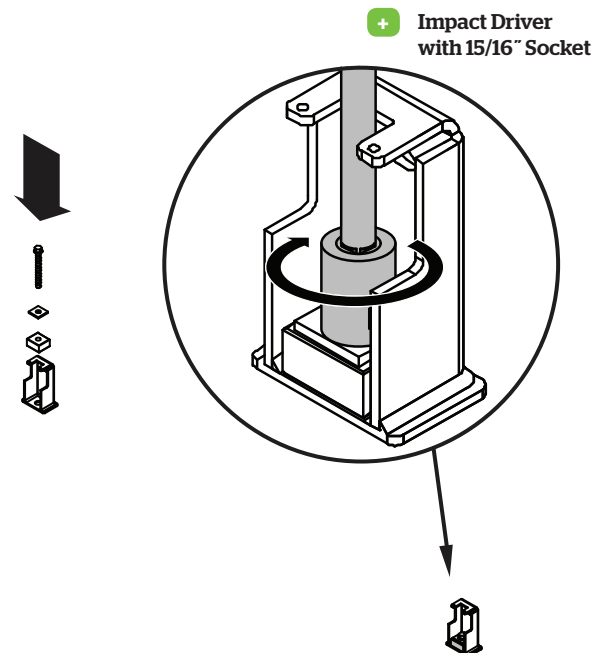

9

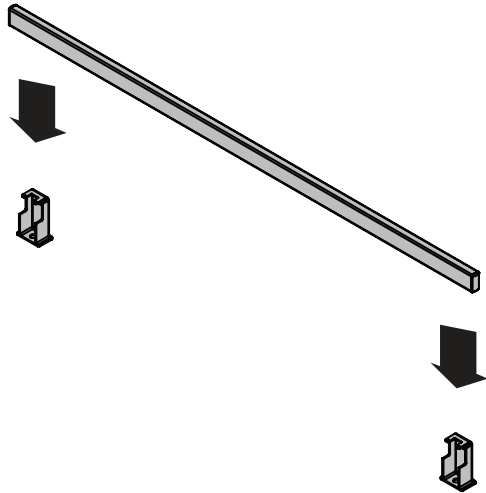


10

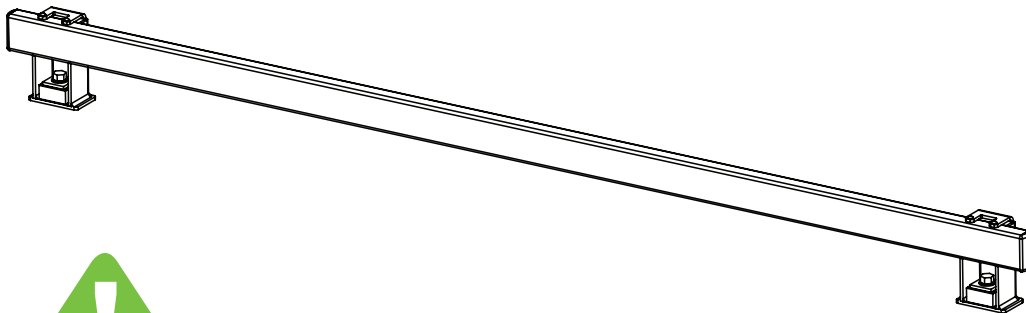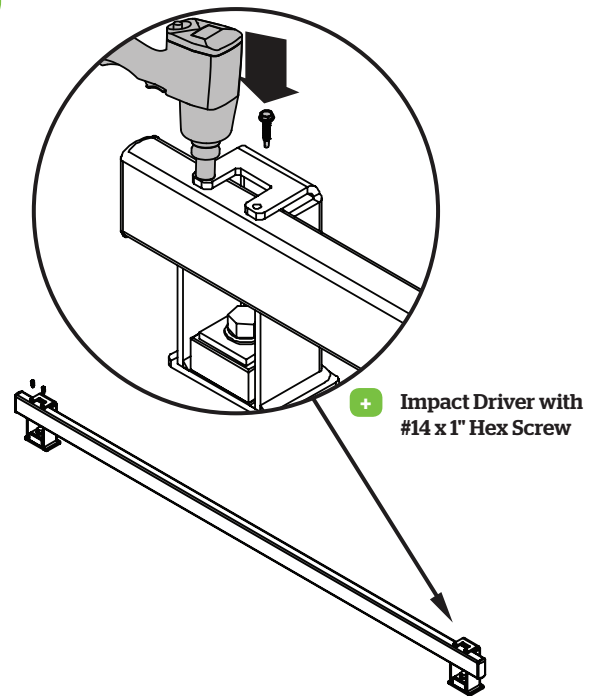

Installation Complete —
See next page for connector
and corner installation

Additional Steps: Corners & Connectors

11

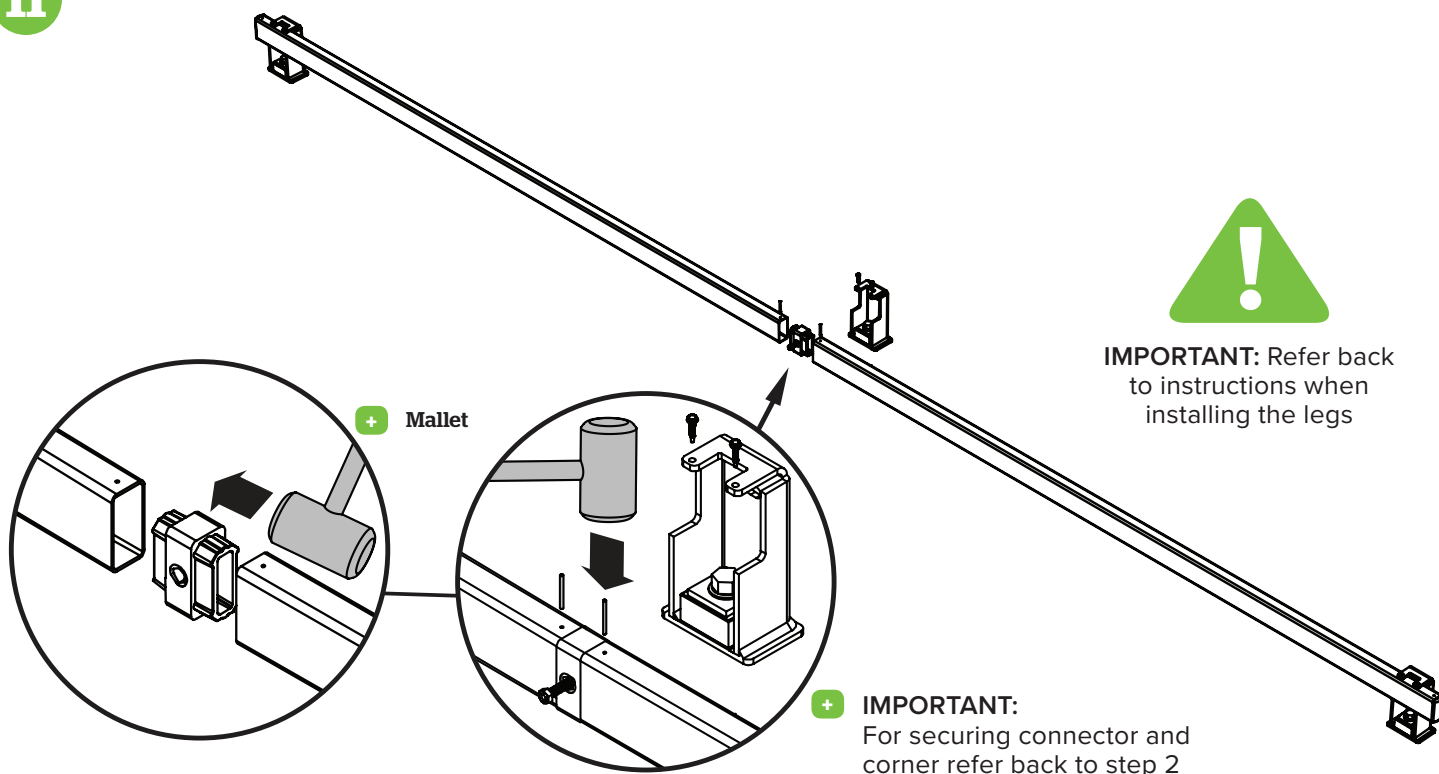

12

